

2114391 Alberta Ltd. 6110 Davies Road NW Edmonton, AB T6E 4M9 Canada 1 (800) 265-3377

62528


Universal Mount Tiedown - Box Mount Set of 2


WILL ONLY FIT TRUCKS WITH A BOX LIP OF LESS THAN 4.25"

WARNING: NOT to be used on boxes with no lip, thin material or composite boxes!

NOTE: This is not a stake pocket tiedown. Can also be used with rear mounted tiedown.



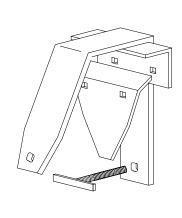

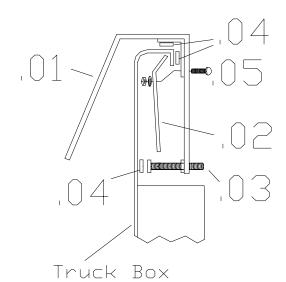

Parts List		Contents of Bolt Pack		Tools Required
2	62528 Mainbody Universal	QtY	Description	9/16" Socket or Wrench
2	62528 Clamp Bracket	2	T-Bolt	100 FT/LB Torque Wrench
1	Bolt Pack 62528/B	2	Nut 1/2", UNC, Plated	
1	Instructions T62000 Series	4	Carriage Bolt 3/8 x 2", UNC, Plated	
		4	Lockwasher, 3/8", UNC, Plated	
		4	Nut 3/8", UNC, Plated	
Shipping	22.3 lbs	8"	Foam for T-Bolt (2x4")	
Weight	10.1 kg	20"	Foam for Mainbody (4x5")	No Drill Application

- 1) Take the mainbody (.01) and attach the foam (.04) to the mainbody as shown above
- 2) Attach the long piece of foam(.04) and attach it to the T-Bolt as shown above. Screw 1/2" nut onto T-Bolt (.03), then screw the T-Bolt into the mainbody.
- 3) Using two 3/8" carriage bolt (.05) and lockwasher and nut, handtightem the clamp bracket (.02) to the mainbody (.01), bacing the truck box between the clamp bracket (.02) and the mainbody (.01)
- 4) Adjust T-Bolt (.03) until the mainbody (.01) runs parallel to the truck box. Tighten 1/2" nut. Place the assembled tiedown in the desired positions, tighten all 3/8" bolts.

Bolt Size	Grade 5 Torque	Metric	Grade 8.8 Torque
3/8	30 Ft. Lb	8 mm	18 Ft. Lb.
7/16	54 Ft. Lb	10 mm	36 Ft. Lb.
1/2	72 Ft. Lb.	12 mm	75 Ft. Lb.
5/8	150 Ft. Lb	14 mm	103 Ft. Lb.
3/4	245 Ft. Lb	Maximum torque for weld or weld nuts is 38 FT/Lb	

Warning: Check Fastens annually or before usage, if the Tiedown is damaged replacement may be necessary.

DO NOT drill or alter this product. This product is only intended for the application listed above.

See vehicle owner's manual for maximum Camper capacity (GVWR). This product is intended for usage with the correct towing accessories and not to be used with tow ropes, cables, chains or any type of stretch or elastic rope.

DSP Hitches are manufactured by 2114391 Alberta Ltd., Edmonton, Alberta, Canada For more information on DSP and DSP products call 1-800-265-3377 or visit us at www.dsphitches.com