


61315
Hitch application
Chev/GMC Front Mount Camper Tiedown
For specific fit, see current fit list in our fitlist at www.dsphitches.com

#61315

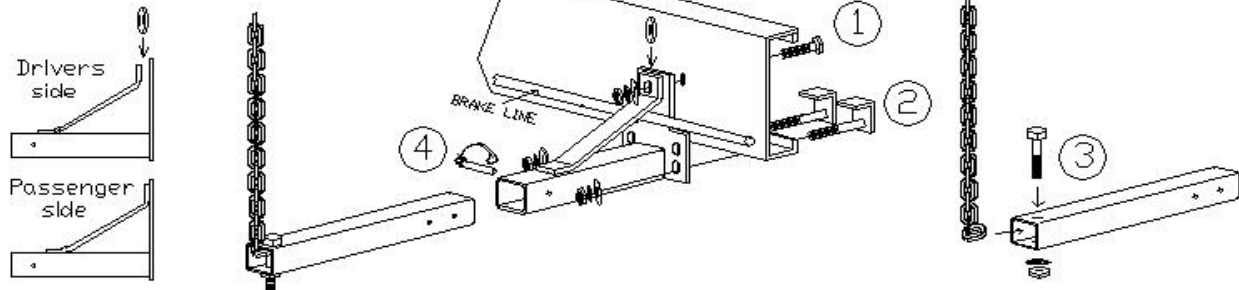

Parts List		Contents of Bolt Pack # 61315/B		Tools Required
1	Main Body Part # 61315/MBD	2	Hex Bolt 1/2 x 2, Grade 5, UNC, Plated	1/2" Socket or Wrench 100 FT/LB Torque Wrench
1	Main Body Part # 61315/MBP	6	Hex Nut 1/2, Grade 5, UNC, Plated	
1	Tube Chains # 63102	6	Flatwasher 1/2, UNC, Grade 5, Plated	No Drill Application
4	Square U-Bolts #X63480	6	Lock washer 1/2", UNC, Grade 5, Plated	
1	Bolt Pack # 61315/B	1	# 91510 3/8 Reinforcement Spacer (round)	
1	Instructions T6100 Series	2	Quick Pin Round 3/8 x 2-1/4	
Shipping	32.4 lbs	2	Hex Bolt 3/8 x 2-1/4, Grade 5, UNC, Plated	
Weight	14.73 kg	2	Lock washer 3/8, Grade 5, Plated	
		2	Hex Nut 3/8, Grade 5, UNC, Plated	
		2	Chain 30", 23 links	

- 1) Start with the driver's side installation. The driver's side main body has a gap to slide the brake cable through (not applicable to all truck models). Locate hole (1) in side of frame. Place 1/2" x 2" hex bolt through frame and main body with the 3/8 spacer and secure in place loosely with flatwasher, lock washer and nut (as shown in diagram).
- 2) Place square u-bolts on c-channel frame (2) and through holes in the main body and secure in place with flatwasher, lock washer and nut.
- 3) Repeat on passenger side.
- 4) Tighten all mounting fasteners to the correct torque specifications listed below.
- 5) For the tube chains: insert the first link into the tube as shown in picture (3) and insert 3/8 hex bolt through tube and chain and secure in place with 3/8 lock washer and 3/8 nut. Tighten all fasteners.
- 6) Fasten tube chain to main body using the supplied quick pin. Remove when not in use.

Bolt Size	Grade 5 Torque	Metric	Grade 8.8 Torque
3/8	30 Ft. Lb.	8 mm	18 Ft. Lb.
7/16	54 Ft. Lb.	10 mm	36 Ft. Lb.
1/2	72 Ft. Lb.	12 mm	75 Ft. Lb.
5/8	150 Ft. Lb.	14 mm	103 Ft. Lb.
3/4	245 Ft. Lb.	Maximum torque for weld or weld nuts is 38 FT/Lb	

Warning: Check Fastens annually or before usage, if the Tiedown is damaged replacement may be necessary.
DO NOT drill or alter this product. This product is only intended for the application listed above.
See vehicle owner's manual for maximum Camper capacity (GVWR). This product is intended for usage with the correct towing accessories and not to be used with tow ropes, cables, chains or any type of stretch or elastic rope.

DSP Hitches are manufactured by 2114391 Alberta Ltd., Edmonton, Alberta, Canada
For more information on DSP and DSP products call 1-800-265-3377 or visit us at www.dsphitches.com